

# **DYNAMIC ENGINEERING**

435 Park Dr., Ben Lomond, Calif. 95005  
831-336-8891    **Fax** 831-336-3840  
<http://www.dyneng.com>  
[sales@dyneng.com](mailto:sales@dyneng.com)  
Est. 1988

## **User Manual** **IP-CF** CompactFLASH<sup>™</sup> Adapter IP Module

Revision A  
Corresponding Hardware: Revision 01  
10-2001-1501

**IP-CF**  
CompactFLASH™ Adapter  
IP Module  
**Dynamic Engineering**  
435 Park Drive  
Ben Lomond, CA 95005  
831-336-8891 831-336-3840 FAX  
www.dyneng.com

This document contains information of proprietary interest to Dynamic Engineering. It has been supplied in confidence and the recipient, by accepting this material, agrees that the subject matter will not be copied or reproduced, in whole or in part, nor its contents revealed in any manner or to any person except to meet the purpose for which it was delivered.

Dynamic Engineering has made every effort to ensure that this manual is accurate and complete. Still, the company reserves the right to make improvements or changes in the product described in this document at any time and without notice. Furthermore, Dynamic Engineering assumes no liability arising out of the application or use of the device described herein.

The electronic equipment described herein generates, uses, and can radiate radio frequency energy. Operation of this equipment in a residential area is likely to cause radio interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

Dynamic Engineering's products are not authorized for use as critical components in life support devices or systems without the express written approval of the president of Dynamic Engineering.

This product has been designed to operate with IP Module carriers and compatible user-provided equipment. Connection of incompatible hardware is likely to cause serious damage.

©2001,2002 by Dynamic Engineering.  
Other trademarks and registered trademarks are owned by their respective manufactures.  
Manual Revision A. Revised 1/27/02



---

---

# Table of Contents

---

---

Product Description and Operation .....	5
Address Map .....	8
Programming.....	9
Register Definitions.....	10
Control Register .....	10
Vector .....	10
Status Register .....	11
CompactFLASH internal registers .....	12
Interrupts .....	13
ID PROM .....	14
IP Module Logic Interface Pin Assignment.....	15
IP Module IO Interface Pin Assignment.....	16
Applications Guide .....	17
Interfacing .....	17
Construction and Reliability.....	18
Thermal Considerations .....	19
Warranty and Repair .....	19
Service Policy .....	20
Out of Warranty Repairs .....	20
For Service Contact: .....	20
Specifications.....	21
Order Information .....	22



---

---

# List of Figures


---

---

FIGURE 1	IP-CF ADDRESS MAP	8
FIGURE 2	IP-CF CONTROL REGISTER 0 BIT MAP	10
FIGURE 3	IP-CF STATUS BIT MAP	11
FIGURE 4	IP-CF ID PROM	14
FIGURE 5	IP-CF LOGIC INTERFACE	15
FIGURE 6	IP-CF IO INTERFACE	16



# Product Description and Operation

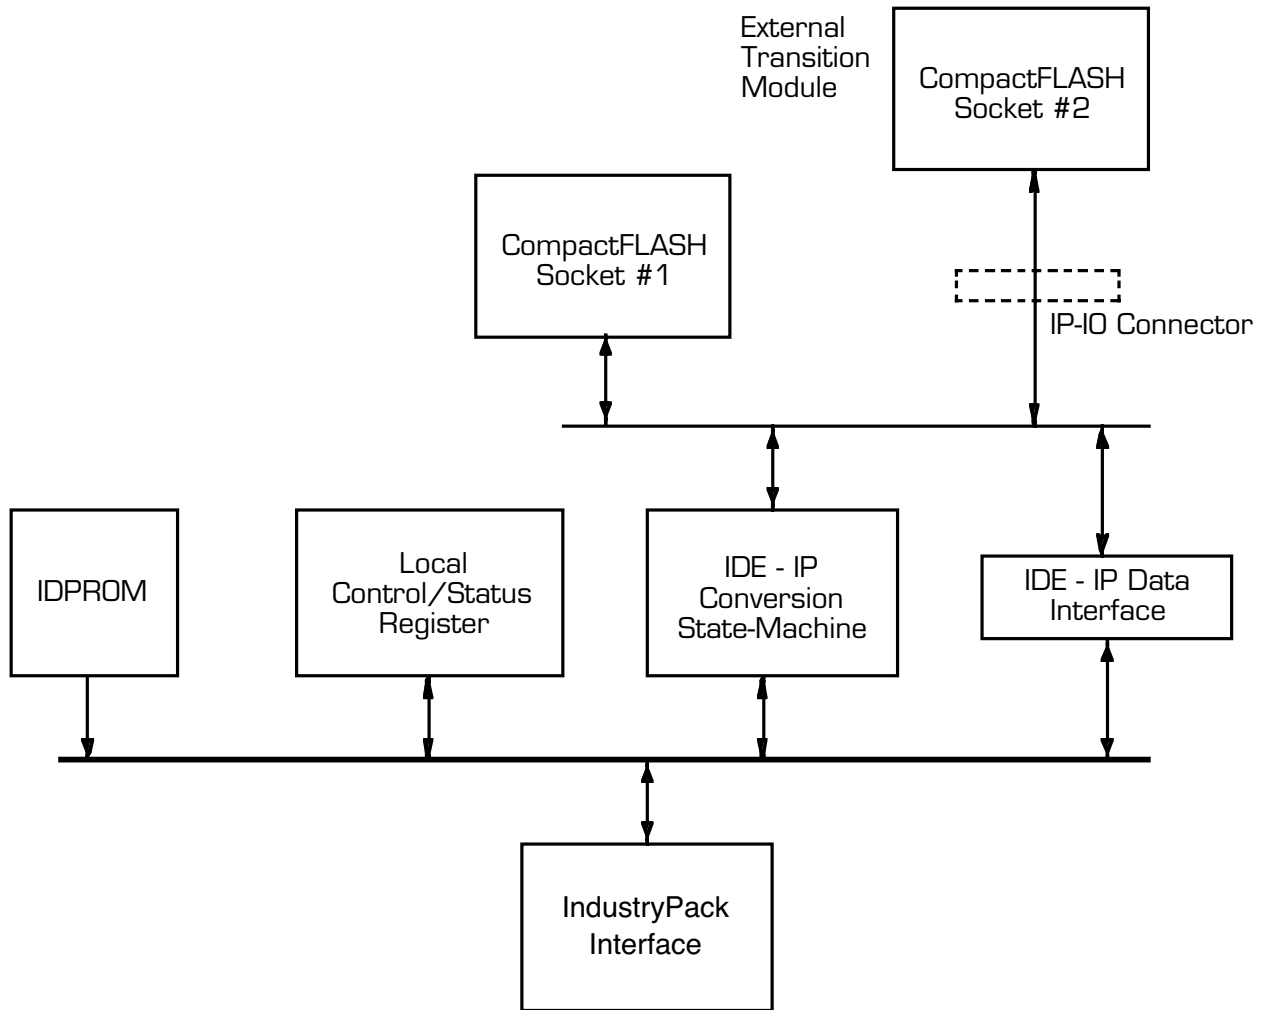

IP-CF is part of the IP Module family of modular I/O components. The IP-CF is an adapter which converts the IP bus protocol to IDE to allow a CompactFLASH module to be installed into an IP slot. CompactFLASH is available in densities ranging up to 512 Mb. The IP-CF is supplied with a 64 Mb module. Other densities available upon request.

CompactFLASH modules can be communicated with in “true IDE” mode or with a variant specific to CompactFLASH. The IP-CF operates in IDE mode to allow other non-CompactFLASH modules to be installed into the adapter.

The IP specification limits the height of the components above the IP to prevent interference with the host card. The IP-CF meets the type 1 [standard] height requirements and can be used in any slot. A single socket can be placed on the IP Module and meet the requirements. The IDE interface can be expanded to allow two CompactFLASH units to be controlled from one IP-CF. The second unit would be installed on a transition module which is available separately.

The internal unit is set to be the master CompactFLASH device. The selection is done with resistors installed at time of manufacture and can be altered by special request.

The IP-CF has an oscillator position which is not used for the standard interface. If you have a custom module which requires an alternate timing scheme the oscillator position can be filled to support your requirements.

The state-machine has a write-through capability to reduce the overhead on the local CPU. The acknowledge signal is asserted when the data is captured within the Xilinx and before the CompactFLASH device is written to. The state-machine completes the data transfer to the CompactFLASH while the local CPU is completing the access and potentially going on to the next set of instructions. If the CPU writes again before the previous transfer is completed then the new data is captured and held until the initial write is completed before performing the second write. The acknowledge is held off until the second write is protected to allow an overlapped pipeline to be established between the host and the CompactFLASH with no loss of data.

Reads from the CompactFLASH data space are completed with the data fetched from the CompactFLASH without hardware acceleration. We may add a pre-read feature in the future to allow a similar no wait state access for the first read.

The IP-CF supports both 8 and 32 Mhz. IP Bus operation. All configuration registers support read and write operations for maximum software convenience. Word operations are supported (please refer to the memory map). The ID, IO, and INT spaces are utilized by the IP-CF design.



The IP-CF conforms to the VITA standard. This guarantees compatibility with multiple IP Carrier boards. Because the IP may be mounted on different form factors, while maintaining plug and software compatibility, system prototyping may be done on one IP Carrier board, with final system implementation on a different one. The PCI3IP card makes a convenient development platform in many cases. [http://www.dyneng.com/pci\\_3\\_ip.html](http://www.dyneng.com/pci_3_ip.html)

Interrupts are supported by the IP-CF. The interrupt occurs when a programmed transition occurs. The vector is user programmable by a read/write register. The interrupt occurs on IntReq0. The vector can be read in the IO space or automatically with the INT space.



# Address Map

IP Internal Addresses				
ip_cf_cntl	EQU	\$00	word	read/write
ip_cf_vect	EQU	\$02	word	read/write
ip_cf_stat	EQU	\$04	word	read/write
ip_cf_IDPROM			byte on word boundary	read
FLASH Addresses				
ip_cf_data	EQU	\$40	word	write/read
ip_cf_f_err	EQU	\$42	word	write/read
ip_cf_sec_cnt	EQU	\$44	word	write/read
ip_cf_cyl_l	EQU	\$46	word	read/write
ip_cf_cyl_h	EQU	\$4A	word	read/write
ip_cf_sch	EQU	\$4C	word	write/read
ip_cf_cmd_stat	EQU	\$4E	word	write/read
ip_cf_cntl_as	EQU	\$5C	word	write/read

FIGURE 1

IP-CF ADDRESS MAP

The address map provided is for the local decoding performed within the IP-CF. The addresses are all offsets from a base address. The carrier board that the IP is installed into provides the base address.



## Programming

Programming the IP-CF requires only the ability to read and write data in the host's I/O space. The base address is determined by the IP Carrier board.

Please refer to the CompactFLASH programmers manual for detailed bit-map information and other programming details. The manual is available from the manufacturers website. Dynamic Engineering currently uses Sandisk CompactFLASH modules.

The IP acts as a bridge between the IP bus interface and the CompactFLASH module. There are a few settings to insure proper operation. This manual covers the internal registers of the IP-CF. Most of the operational interface is controlled by the CompactFLASH module and is covered by the CompactFLASH Manual.

The engineering kit provides reference software which Dynamic Engineering uses to test the IP-CF. The IP-CF is mounted to a PCI3IP carrier.

[ [http://www.dyneng.com/pci\\_3\\_ip.html](http://www.dyneng.com/pci_3_ip.html) ] Windows NT is the OS. WinRT and MS Visual C are used to operate the tests. The Identify Disk information is read and checked. The model, serial number and firmware revision are displayed. The IDPROM is read and checked. The vector register has a loop-back test. The FLASH memory is programmed and read-back. The read-write test to the FLASH finds the first non-programmed sector, programs that sector and then reads the data back. If the test is looped the data is read many times and only programmed once. If the software is re-launched then the next sector will be written to and then read back. We do the sector marking to keep from doing excessive writes in test. The CompactFLASH interrupts and control functions are tested during the identify and r/w tests. The source code is included for your reference. In addition to the software, the engineering kit includes a reference schematic plus the IP-Debug-Bus and the IP-Debug-IO. WinRT and MS Visual C are available separately.

An NT driver will be available soon. If you need a custom version of the card or a custom driver please contact Dynamic Engineering.

Please note that some carrier boards do not use the interrupt vector. Some carriers require the interrupt vector. If needed, the vector register and the interrupt service routine should be loaded and the mask set.



## Register Definitions

### Control Register

Ip\_cf\_cntl \$00 IP-CF Control Register Port read/write

ip_cf_cntl	
DATA BIT	DESCRIPTION
15-5	spare
4	0 = 32 MHz, 1 = 8 MHz
3	spare
2	0 = not force interrupt, 1 = force interrupt
1	0 = not enabled master interrupt
0	0 = not Reset IDE, 1 = reset IDE

FIGURE 2

IP-CF CONTROL REGISTER 0 BIT MAP

1. All bits are active low and are reset on power-up.
2. The state-machine which converts from IP to IDE and vice-versa can be optimized to the 8 or 32 MHz clock. At 32 MHz more wait-states are required. If running at 8 MHz the additional wait-states can be removed for improved performance.
3. The force interrupt bit when set can cause an interrupt to the host. The master interrupt enable must also be set. The force interrupt bit can be used to cause an interrupt for test or software development purposes.
4. The master interrupt enable when set allows the force interrupt or the CompactFLASH interrupt to be passed to the host. The interrupt should be cleared at the source.
5. The Reset IDE bit can be used to reset the CompactFLASH slots. Reset on the IDE bus is active high.

### Vector

Ip\_cf\_vect \$02 IP-CF Interrupt Vector Port

The Interrupt vector for the IP-CF is stored in this byte wide register. This read/write register is initialized to 'xFF' upon power-on reset. The vector is stored in the odd byte location [D7..0]. The vector should be initialized before the interrupt is enabled or the mask is lowered. The interrupt is automatically cleared when the CPU acknowledges the interrupt.



## Status Register

Ip\_cf\_stat \$04 IP-CF Status read/write

DATA BIT	Direct Data	DESCRIPTION
15-9		undefined read-only
8		'0'
7-6		CD22-CD21 external device
5-4		CD12-CD11 internal device
3		'0'
2		IREQ
1		PDIAG – Passed Diagnostics
0		DASP – Device Active Slave Present

FIGURE 3

IP-CF STATUS BIT MAP

Bits marked '0' are set to '0'. Bits marked undefined are used for special purposes and will not return predicable status – should be masked off.

CD are the Card Detect bits for the two potential CompactFLASH devices. The internal socket is device 1. The card detect bits can be used to determine if a CompactFLASH device is installed. The bits are active low => "00" when a card is installed and "11" when no device is present. The type of device installed can be read from the Identify Drive table located within the CompactFLASH device.

IREQ is the interrupt request from the CompactFLASH before it is gated with the master interrupt enable. The interrupt can be polled from the status register if non – interrupt driven operation is preferred.

Passed Diagnostics and Device Active Slave Present are status signals created by the CompactFLASH device(s) and read through the status register. For an exact definition of the bits please refer to the CompactFLASH manual.



## CompactFLASH internal registers

ip_cf_data	0x40	// compact flash read/write data pointer
ip_cf_f_err	0x42	// compact flash write feature/read error
ip_cf_sec_cnt	0x44	// compact flash read/write sector count pointer
ip_cf_sec_num	0x46	// compact flash read/write sector number pointer
iip_cf_cyl_l	0x48	// compact flash read/write cylinder number low pointer
ip_cf_cyl_h	0x4a	// compact flash read/write cylinder number high pointer
ip_cf_sch	0x4c	// compact flash read/write select card, head pointer
ip_cf_cmd_stat	0x4e	// compact flash write command/read status pointer
ip_cf_cntl_as	0x5c	// compact flash write control/read alt status pointer

Please refer to the CompactFLASH manuals for bit-map information.



## Interrupts

All IP Module interrupts are vectored. The vector from the IP-CF comes from a vector register loaded as part of the initialization process. The vector register can be programmed to any 8 bit value. The default value is \$FF which is sometimes not a valid user vector. The software is responsible for choosing a valid user vector.

The CompactFLASH state machines generate an interrupt request when a programmed condition is detected. The interrupt is mapped to interrupt request 0. The CPU may respond by asserting INT. The hardware will automatically supply the appropriate interrupt vector when accessed by the CPU. The source of the interrupt is obtained by reading the CompactFLASH internal registers.

Some carrier boards pre-fetch data. If your carrier board pre-fetches the interrupt status, then the status may be cleared when the SW goes to look at it. If this is an issue then be careful with the order of reading the registers to prevent the pre-fetching function from affecting operation.

The interrupt level seen by the CPU is determined by the IP Carrier board being used. The master interrupt can be disabled or enabled through the ip\_cf\_cntl register. The Interrupt acknowledge cycle fetches the vector, but does not clear the interrupt request in this design. The interrupt acknowledge cycle is not needed for this design and is supported to be in compliance with the IP Module standard. If your design does not need to use the interrupt vector then the Interrupt space and vector can be bi-passed in favor of direct access to the CompactFLASH module for interrupt status information.

If operating in a polled mode and making use of the interrupts for status then the master interrupt should be disabled.



## ID PROM

Every IP contains an ID PROM, whose size is at least 32 x 8 bits. The ID PROM aids in software auto configuration and configuration management. The user's software, or a supplied driver, may verify that the device it expects is actually installed at the location it expects, and is nominally functional. The ID PROM contains the manufacturing revision level of the IP. If a driver requires that a particular revision to be present, it may check for it directly.

The location of the ID PROM in the host's address space is dependent on which carrier is used.

Standard data in the ID PROM on the IP-CF is shown in the figure below. For more information on IP ID PROMs refer to the IP Module Logic Interface Specification, available from Dynamic Engineering.

Each of the modifications to the IP-CF board will be recorded with a new code in the DRIVER ID and reserved fields.

Address	Data	IP-CF
01	ASCII "I"	\$49
03	ASCII "P"	\$50
05	ASCII "A"	\$41
07	ASCII "H"	\$48
09	Manufacturer ID	\$1E
0B	Model Number	\$05
0D	Revision	\$A0
0F	reserved	\$00
11	Driver ID, low byte	\$00
13	Driver ID, high byte	\$00
15	No of extra bytes used	\$0C
17	CRC	\$4D

FIGURE 4

IP-CF ID PROM



# IP Module Logic Interface Pin Assignment

The figure below gives the pin assignments for the IP Module Logic Interface on the IP-CF. Pins marked n/c below are defined by the specification, but not used on the IP-CF. Also see the User Manual for your carrier board for more information.

GND		GND		1	26	
CLK		+5V		2	27	
Reset*		R/W*		3	28	
DO		IDSEL*		4	29	
D1		DMAReq0*		5	30	
D2		MEMSEL*		6	31	
D3		DMAReq1*		7	32	
D4		IntSel*		8	33	
D5		DMAAck*		9	34	
D6		IOSel*		10	35	
D7		n/c		11	36	
D8		A1		12	37	
D9		DMAEnd*		13	38	
D10		A2		14	39	
D11		n/c		15	40	
D12		A3		16	41	
D13		IntReq0*		17	42	
D14		A4		18	43	
D15		IntReq1*		19	44	
BS0*		A5		20	45	
BS1*		n/c		21	46	
n/c		A6		22	47	
n/c		Ack*		23	48	
+5V		n/c		24	49	
GND		GND		25	50	

NOTE 1: The no-connect signals above are defined by the IP Module Logic Interface Specification, but not used by this IP. See the Specification for more information.

NOTE 2: The layout of the pin numbers in this table corresponds to the physical placement of pins on the IP connector. Thus this table may be used to easily locate the physical pin corresponding to a desired signal. Pin 1 is marked with a square pad on the IP Module.

FIGURE 5

IP-CF LOGIC INTERFACE



## IP Module IO Interface Pin Assignment

The figure below gives the pin assignments for the IP Module IO Interface on the IP-CF. Pins marked. Also see the User Manual for your carrier board for more information.

CD21	IORD		1	26	
CD22	GND		2	27	
GND	IOWR		3	28	
GND	GND		4	29	
GND	DMARQ		5	30	
FP5V	FP5V	OPEN	6	31	
FP5V	GND		7	32	
FP5V	FP5V	D15	8	33	
FP5V	DO	D14	9	34	
GND	FP5V	D1	10	35	
DASP	D1	D13	11	36	
CS1	D2	D12	12	37	
CS0	D2	D12	13	38	
A2	D3	D11	14	39	
AO	D3	D11	15	40	
PDIAG	D4	D10	16	41	
A1	D4	D10	17	42	
IOCS16	D5		18	43	
IREQ	D5	D9	19	44	
GND	IREQ	D9	20	45	
DMACKN	D6	D8	21	46	
IORDY	D6	D8	22	47	
GND	D7		23	48	
IORD	GND	GND	24	49	
IORD	RESET		25	50	

NOTE 1: The layout of the pin numbers in this table corresponds to the physical placement of pins on the IP connector. Thus this table may be used to easily locate the physical pin corresponding to a desired signal. Pin 1 is marked with a square pad on the IP Module. Unused pins should not be connected.

FIGURE 6

IP-CF IO INTERFACE



# Applications Guide

## Interfacing

Some general interfacing guidelines are presented below. Do not hesitate to contact the factory if you need more assistance.

**Watch the system grounds.** All electrically connected equipment should have a fail safe common ground that is large enough to handle all current loads without affecting noise immunity. Power supplies and power consuming loads should all have their own ground wires back to a common point.

**Power all system power supplies from one switch.** Connecting external voltage to the IP-CF when it is not powered can damage it, as well as the rest of the host system. This problem may be avoided by turning all power supplies on and off at the same time.

**We provide the components. You provide the system.** Safety and reliability can be achieved only by careful planning and practice. Inputs can be damaged by static discharge, by applying voltage less than ground or more than +5 volts with the IP powered. With the IP unpowered, driven input voltages should be kept within .7 volts of ground potential.

**Terminal Block.** We offer a high quality 50 screw terminal block that directly connects to the flat cable. The terminal block mounts on standard DIN rails.  
[ <http://www.dyneng.com/HDRterm50.html> ]

Many flat cable interface products are available from third party vendors to assist you in your system integration and debugging. These include connectors, cables, test points, 'Y's, 50 pin in-line switches, breakout boxes, etc.



## Construction and Reliability

IP Modules were conceived and engineered for rugged industrial environments. The IP-CF is constructed out of 0.062 inch thick FR4 material.

Through hole and surface mounting of components are used. IC sockets use high quality plated screw machine pins. High insertion and removal forces are required, which assists in the retention of components. If the application requires unusually high reliability or is in an environment subject to high vibration, the user may solder the corner pins of each socketed IC into the socket, using a grounded soldering iron.

The IP Module connectors are keyed and shrouded with Gold plated pins on both plugs and receptacles. They are rated at 1 Amp per pin, 200 insertion cycles minimum. These connectors make consistent, correct insertion easy and reliable.

The IP is secured against the carrier with four metric M2 stainless steel screws. The heads of the screws are countersunk into the IP. The four screws provide significant protection against shock, vibration, and incomplete insertion. For most applications, they are not required. *Please order standard mounting kit for IPs if you want this option.* [IP-MTG-KIT]

The IP Module provides a low temperature coefficient of 0.89 W/°C for uniform heat. This is based upon the temperature coefficient of the base FR4 material of 0.31 W/m-°C, and taking into account the thickness and area of the IP. The coefficient means that if 0.89 Watts are applied uniformly on the component side, then the temperature difference between the component side and solder side is one degree Celsius.



## Thermal Considerations

The IP-CF design consists of CMOS circuits. The power dissipation due to internal circuitry is very low. It is possible to create a higher power dissipation with the externally connected logic. If more than one a Watt is required to be dissipated due to external loading then forced air cooling is recommended. With the one degree differential temperature to the solder side of the board external cooling is easily accomplished.

## Warranty and Repair

Dynamic Engineering warrants this product to be free from defects in workmanship and materials under normal use and service and in its original, unmodified condition, for a period of one year from the time of purchase. If the product is found to be defective within the terms of this warranty, Dynamic Engineering's sole responsibility shall be to repair, or at Dynamic Engineering's sole option to replace, the defective product. The product must be returned by the original customer, insured, and shipped prepaid to Dynamic Engineering. All replaced products become the sole property of Dynamic Engineering.

Dynamic Engineering's warranty of and liability for defective products is limited to that set forth herein. Dynamic Engineering disclaims and excludes all other product warranties and product liability, expressed or implied, including but not limited to any implied warranties of merchandisability or fitness for a particular purpose or use, liability for negligence in manufacture or shipment of product, liability for injury to persons or property, or for any incidental or consequential damages.

Dynamic Engineering's products are not authorized for use as critical components in life support devices or systems without the express written approval of the president of Dynamic Engineering.



## **Service Policy**

Before returning a product for repair, verify as well as possible that the suspected unit is at fault. Then call the Customer Service Department for a RETURN MATERIAL AUTHORIZATION (RMA) number. Carefully package the unit, in the original shipping carton if this is available, and ship prepaid and insured with the RMA number clearly written on the outside of the package. Include a return address and the telephone number of a technical contact. For out-of-warranty repairs, a purchase order for repair charges must accompany the return. Dynamic Engineering will not be responsible for damages due to improper packaging of returned items. For service on Dynamic Engineering Products not purchased directly from Dynamic Engineering contact your reseller. Products returned to Dynamic Engineering for repair by other than the original customer will be treated as out-of-warranty.

### **Out of Warranty Repairs**

Out of warranty repairs will be billed on a material and labor basis. The current minimum repair charge is \$100. Customer approval will be obtained before repairing any item if the repair charges will exceed one half of the quantity one list price for that unit. Return transportation and insurance will be billed as part of the repair and is in addition to the minimum charge.

### **For Service Contact:**

Customer Service Department  
Dynamic Engineering  
435 Park Dr.  
Ben Lomond, CA 95005  
831-336-8891  
831-336-3840 fax  
e-mail [support@dyneng.com](mailto:support@dyneng.com)



# Specifications

Logic Interface:	IP Module Logic Interface
CompactFLASH:	One CompactFLASH compatible socket provided. External transition module can be used to add a second module.
Software Interface:	Control Registers, ID PROM, Vector Register, Status Ports
Initialization:	Hardware Reset forces all registers to 0.
Access Modes:	Word I/O Space (see memory map) Word in ID Space Vectored interrupt
Access Time:	Access time depends on CompactFLASH Module. back-to-back cycles in 500ns (8Mhz.) or 125 nS (32 Mhz.) for internal operations. Approximately 1 uS for CompactFLASH accesses. Write operations are posted and return for pipelined operation. Read accesses are data delayed.
Interrupt:	Masked or polled operation. Master interrupt enable and status. INTRQO only.
DMA:	No Logic Interface DMA Support implemented at this time.
Onboard Options:	All Options are Software Programmable
Interface Options:	50 pin flat cable 50 screw terminal block interface [HDRterm50] User cable non required.
Dimensions:	Standard Single IP Module. 1.8 x 3.9 x 0.344 (max.) inches
Construction:	FR4 Multi-Layer Printed Circuit, Through Hole and Surface Mount Components. Programmable parts are socketed.
Temperature Coefficient:	0.89 W/°C for uniform heat across IP
Power:	Max. <b>TBD</b> mA @ 5



## Order Information

The IP-CF board has 9 standard configurations.

[http://www.dyneng.com/ip\\_cf.html](http://www.dyneng.com/ip_cf.html)

“no dash”	IP Module with 64 Mb of CompactFLASH
“-1”	IP Module with 8 Mb of CompactFLASH
“-2”	IP Module with 16 Mb of CompactFLASH
“-3”	IP Module with 32 Mb of CompactFLASH
“-4”	IP Module with 64 Mb of CompactFLASH
“-5”	IP Module with 128 Mb of CompactFLASH
“-6”	IP Module with 192 Mb of CompactFLASH
“-7”	IP Module with 256 Mb of CompactFLASH
“-8”	IP Module with 384 Mb of CompactFLASH
“-9”	IP Module with 512 Mb of CompactFLASH

### Tools for IP-CF

IP-Debug-Bus - IP Bus interface extender with testpoints, isolated power and quickswitch technology to allow hot swapping of IPs or power cycling without powering down the host.

<http://www.dyneng.com/ipdbgbus.html>

IP-Debug-IO II - IndustryPack IO connector breakout with testpoints, ribbon cable headers, and locations for user circuits. <http://www.dyneng.com/ipdbgio.html>

HDRterm50 - Ribbon cable compatible 50 pin header to 50 screw terminal header. Comes with DIN rail mounting capability. <http://www.dyneng.com/HDRterm50.html>

PCI3IP - 1/2 length PCI card with 3 IP slots.  
[http://www.dyneng.com/pci\\_3\\_ip.html](http://www.dyneng.com/pci_3_ip.html)

IP-MTG-KIT - 4 metric stainless screw and stand-off pairs to retain IP-CF against the carrier board. Flat head screws match IP Specification mounting requirements.

All information provided is Copyright Dynamic Engineering



**Dynamic  
Engineering**

Hardware & Software Design Pg 22 of 22