

DYNAMIC ENGINEERING

435 Park Dr., Ben Lomond, Calif. 95005
831-336-8891 Fax 831-336-3840

Web Page <http://www.dyneng.com>

E-Mail sales@dyneng.com

engineering@dyneng.com

support@dyneng.com

Est. 1988

User Manual

IP-BiSerial-LS1

Bi-directional Serial Data Interface
IP Module

Revision A
Corresponding Hardware: Revision 2

IP-BiSerial
version LS1
Digital Serial Interface
IP Module
Dynamic Engineering
435 Park Drive
Ben Lomond, CA 95005
831-336-8891
831-336-3840 FAX

This document contains information of proprietary interest to Dynamic Engineering. It has been supplied in confidence and the recipient, by accepting this material, agrees that the subject matter will not be copied or reproduced, in whole or in part, nor its contents revealed in any manner or to any person except to meet the purpose for which it was delivered.

Dynamic Engineering has made every effort to ensure that this manual is accurate and complete. Still, the company reserves the right to make improvements or changes in the product described in this document at any time and without notice. Furthermore, Dynamic Engineering assumes no liability arising out of the application or use of the device described herein.

The electronic equipment described herein generates, uses, and can radiate radio frequency energy. Operation of this equipment in a residential area is likely to cause radio interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

Dynamic Engineering's products are not authorized for use as critical components in life support devices or systems without the express written approval of the president of Dynamic Engineering.

This product has been designed to operate with PMC Module carriers and compatible user-provided equipment. Connection of incompatible hardware is likely to cause serious damage.

©1999 by Dynamic Engineering.
Other trademarks and registered trademarks are owned by their respective manufactures.
Manual Revision A. Revised 1/5/00



Table of Contents

Product Description and Operation	5
Address Map	9
Programming.....	10
Register Definitions.....	12
BIS_CNTLO	12
BIS_CNTL1	14
BIS_CNTL2	14
BIS_CNTL3	15
BIS_VECTOR	16
BIS_STAT1	17
BISERIAL_RESET	17
BIS_TX_FIFO_O_W	17
BIS_TX_FIFO_1_W	17
BIS_TX_FIFO_O_R	17
BIS_TX_FIFO_1_R	18
BIS_RX_FIFO_O_W	18
BIS_RX_FIFO_1_W	18
BIS_RX_FIFO_O_R	18
BIS_RX_FIFO_1_R	18
Interrupts	19
ID PROM	21
IP Module Logic Interface Pin Assignment.....	22
IP Module IO Interface Pin Assignment.....	23
Applications Guide	24
Interfacing	24
Construction and Reliability.....	25
Thermal Considerations	26
Warranty and Repair	26
Service Policy	27
Out of Warranty Repairs	27
For Service Contact:	27
Specifications.....	28
Order Information	29
Programming Reference.....	30
Programmable Almost Empty Flag Example.....	30




List of Figures

FIGURE 1	IP-BISERIAL-LS1 INTERNAL ADDRESS MAP	9
FIGURE 2	IP-BISERIAL-LS1 CONTROL REGISTER 0 BIT MAP	12
FIGURE 3	IP-BISERIAL-LS1 CONTROL REGISTER 1 BIT MAP	14
FIGURE 4	IP-BISERIAL-LS1 CONTROL REGISTER 2 BIT MAP	14
FIGURE 5	IP-BISERIAL-LS1 CONTROL REGISTER 3 BIT MAP	15
FIGURE 6	IP-BISERIAL-LS1 STATUS REG 0 BIT MAP	16
FIGURE 7	IP-BISERIAL-LS1 STATUS REG 1 BIT MAP	17
FIGURE 8	IP-BISERIAL-LS1 ID PROM	21
FIGURE 9	IP-BISERIAL-LS1 LOGIC INTERFACE	22
FIGURE 10	IP-BISERIAL-LS1 IO INTERFACE	23



Product Description and Operation

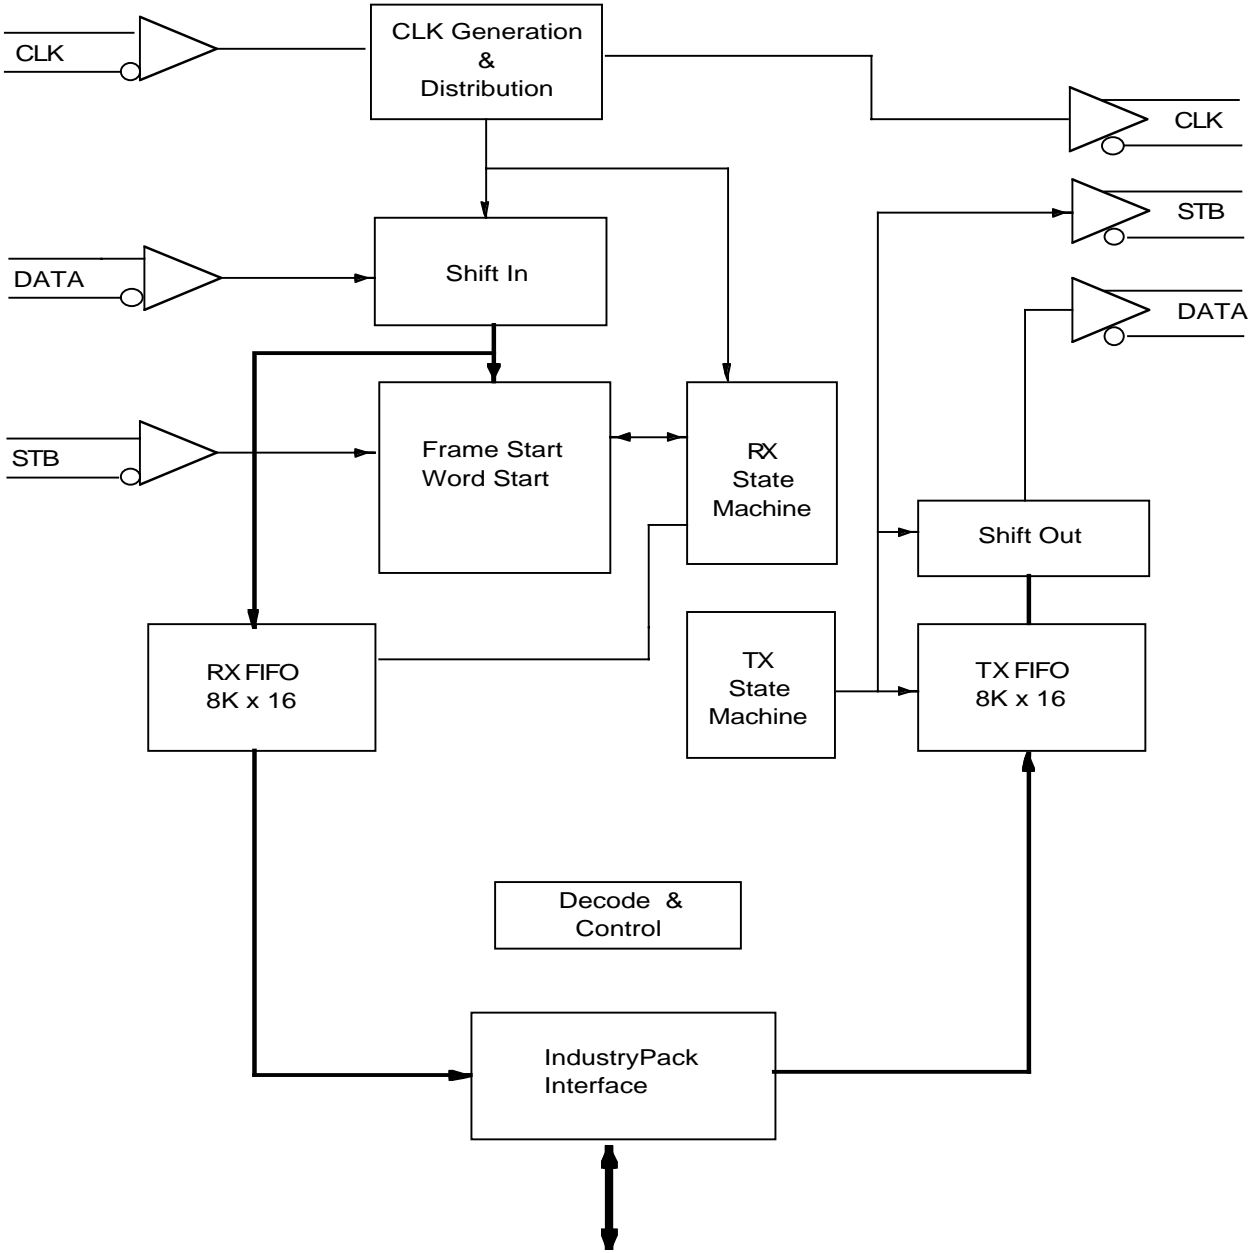

IP-BISERIAL-LS1 is part of the IP Module family of modular I/O components. The IP-BISERIAL-LS1 is capable of providing multiple serial protocols. The standard protocol implemented provides a Data and Clock interface. The -LS1 version is a custom modification. The modifications include pulsed data strobe and synchronization pattern detection. When enabled, the -LS1 idles in the receive mode and waits for the start of a new frame. When a frame is recognized, the hardware will respond by receiving the message up to a pre-programmed message length. When the message is complete the host is interrupted and reception is disabled.

Bit:	23-19	18	1 7		0
Value:	SPARE BITS	FRAME_SYNC	SAMPLE_DATA		

The MSB is transferred in bit position 0. The first 16 bits are stored per word.

A matching transmit function is included to allow loop-back testing and software development.

In addition to the LS1 version, other custom interfaces are available. Please see our web page for current protocols offered. If you do not find it there, we will redesign the state machines and create a custom interface protocol. That protocol will then be offered as a “standard” special order product. Please contact Dynamic Engineering with your custom application.

The IP-BISERIAL-LS1 supports both 8 and 32 Mhz. IP Bus operation. The IP Clock or external reference is used to derive the reference clocks for the serial operation. Please be sure to select the proper clock divisors and source selector after reset to insure proper operation. Please refer to the programming section for details.

Differential I/O is available on the serial signals. The differential drivers and receivers conform to the RS-485 specification (exceeds RS-422 specification). The RS-485 input signals are terminated with 180Ω.

All configuration registers support read and write operations for maximum software convenience. Word operations are supported (please refer to the memory map).

The IP-BISERIAL-LS1 conforms to the VITA standard. This guarantees compatibility with multiple IP Carrier boards. Because the IP may be mounted on different form factors, while maintaining plug and software compatibility, system prototyping may be done on one IP Carrier board, with final system



implementation on a different one. The PCI3IP card makes a convenient development platform in many cases. http://www.dyneng.com/pci_3_ip.html

The serial receive channel is supported by an 8K by 16 bit FIFO. The FIFO supports byte and word reads. Word reads are recommended to keep the FIFOs synchronized at all times. A byte wide write path exists for loop-back testing. The receive channel looks for data in word transfers. The received words are loaded into the FIFOs. The data loaded is counted and when the count matches the reference value, the message is considered completed. The host can poll or wait for the message complete interrupt. The message can be read directly from the input FIFO.

The Output channel has a separate 8k x 16 FIFO. The FIFO can be written as words or bytes. Word writes are recommended to keep the FIFOs synchronized. The Transmitter when enabled uses a 4 MHz. reference clock to transmit data. The data is sent with the first word marked as frame start. Data is sent MSB first. Transmission continues until the FIFOs are detected to be empty [either or both]. Data is sent with the transition on the rising edge.

Received data is captured on the falling edge of the reference clock.


Please refer to the following timing diagram.

Interrupts are supported by the IP-BISERIAL-LS1. The interrupt occurs at the end of the transmission whether data is received or sent or both. The interrupts are individually maskable. The vector is user programmable by a read/write register. The interrupt occurs on IntReqO. The FIFO status is available for the FIFO making it possible to operate in a polled mode.

The IP-BISERIAL-LS1 features a Xilinx FPGA. The FPGA contains all of the registers and protocol controlling elements of the BISERIAL design. Only the drivers, receivers, boot PROM and FIFOs are external to the Xilinx device.

The bus interface to the host CPU is controlled by a logic block within the Xilinx device that contains the decoding and timing elements required to interface to the IP bus interface. The timing is referenced to the 8 or 32 MHz IP logic clock. The IP responds to the ID, INTSEL, MEM and IO selects. The DMA control lines are connected to the Xilinx for future revisions, and are not used at this time. The BISERIAL design requires wait states for read or write cycles to any address. Hold cycles are supported as required by the host processor. Data remains enabled during a read until the host removes the SEL line. Local timing terminates a write cycle prior to ACK being asserted. If no hold cycles are requested by the host, the IP-BISERIAL-LS1 is capable of supporting 16+ MB per second data transfer rate with a 32 Mhz. reference rate.



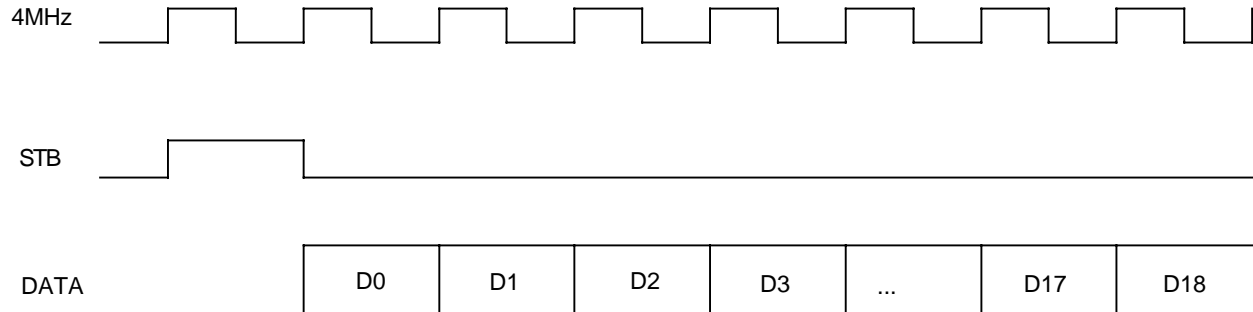

The -LS1 interface is designed to work with a Burr-Brown DSP102 device. The DSP102 drives the sync pulse high then drives 23 bits on the data bus. The First 16 positions correspond to data. The 18th is used as a frame marker. The rest are considered padding with the -LS1 interface. If other hardware is used to interface to the -LS1 card please be aware that it takes the state machine 2 clocks after the 18th bit to turn around and be ready to accept a new strobe for the next data point. More specifically, the second word strobe can come on the third bit time after D18. The hardware can handle back-to-back cycles with the DSP-102 timing.



Address Map

Function		Offset	Width	Type
BIS_CNTL0	EQU	\$00	word	read/write
BIS_CNTL1	EQU	\$02	word	read/write
BIS_CNTL2	EQU	\$04	word	read/write
BIS_CNTL3	EQU	\$06	word	read/write
BIS_VECTOR	EQU	\$08	word	read/write
BIS_STAT0	EQU	\$0A	word	read
BIS_STAT1	EQU	\$0C	word	read
BIS_STAT2	EQU	\$0E	word	read - not used -LS1
BIS_RESET	EQU	\$0E	word	write
BIS_TX_FIFO_O_W	EQU	\$10	D15..8 byte or word	write
BIS_TX_FIFO_1_W	EQU	\$11	D7..0 byte	write
BIS_TX_FIFO_O_R	EQU	\$10	byte on word boundary	read
BIS_TX_FIFO_1_R	EQU	\$14	byte on word boundary	read
BIS_RX_FIFO_O_W	EQU	\$20	byte on word boundary	write
BIS_RX_FIFO_1_W	EQU	\$24	byte on word boundary	write
BIS_RX_FIFO_O_R	EQU	\$20	D15..8 byte or word	read
BIS_RX_FIFO_1_R	EQU	\$21	D7..0 byte	read
BISERIAL_IDPROM	EQU	\$80	byte on word boundary	read
MEM Space Read any address = RX FIFO Read				
MEM Space write any address = TX FIFO Write				

FIGURE 1

IP-BISERIAL-LS1 INTERNAL ADDRESS MAP

The address map provided is for the local decoding performed within the IP-BISERIAL-LS1. The addresses are all offsets from a base address. The carrier board that the IP is installed into provides the base address and controls the “naming of the bytes”. We refer to the bytes following Motorola conventions. i.e. upper is D15-D8 and lower is D7-D0. When byte wide data is located on the lower byte then an odd address results or the use of a word access using only the lower byte of data. We prefer the word oriented approach because it is more consistent across platforms.



Programming

Programming the IP-BISERIAL-LS1 requires only the ability to read and write data in the host's I/O space. The base address is determined by the IP Carrier board.

In order to receive data the software is only required to enable the RX state machine and FIFOs. If desired, the interrupt can be enabled and the interrupt vector written to the vector register. Data will be loaded into the FIFOs as it is received.

A typical sequence would be to first write to the vector register with the desired interrupt vector. For example, \$40 is a valid user vector for the Motorola 680x0 family. Please note that some carrier boards do not use the interrupt vector. The interrupt service routine should be loaded and the mask should be set. When the start bit is set the hardware looks to make sure that a message is not in progress, then begins looking for a message to start. In this manner, the data received is protected from joining mid-message. Once a new message is detected the data loading process begins. When the no data condition is detected the interrupt request is asserted to let the host know that the data is available. The software can read the data from the FIFOs efficiently based on the preprogrammed word count. The transfer status should be checked to determine the validity of the message received.

The end of transmission interrupt will indicate to the software that the message has been started and that the message has terminated. If both the TX and RX interrupts are enabled then the SW needs to read BIS_STAT0 to see which source caused the interrupt. Reading BIS_STAT0 will clear the interrupt status, and the INTACK cycle will clear the actual interrupt. The interrupt status can be read after the INTACK cycle. It is a good idea to read the status register to force the RX_INT and TX_INT bits to 0 before Start is enabled to insure that the RX_INT or TX_INT=1 value read by the interrupt service routine came from the current operation.

Before transmitting data the FIFOs are enabled and the data loaded. The LS1 design should have the external clock selected for the reference and the divisor should be set to 000. The baud rate selections are used to select the output rate. CLK_HI must be set to the proper level if using the internal rates. CLK_HI selects [or not] the prescaler. Alternate baud rates are available if CLK_HI is set mismatched to the IP reference rate. Once the complete message is loaded and the controls set properly the start bits can be set to cause the transfer to begin.

The -LS1 version of the BiSerial implements Memory Space accesses to allow multiple addresses to be mapped into the FIFOs. This is useful if the processor



supports bursts or automatic bus sizing. A 32 bit write/read with some CPUs will result in two 16 bit accesses to the hardware with automatic incrementing addresses. The 32 bit access is quite a bit faster than a software loop. If the host processor supports burst or DMA to the IP MEM space then the resulting incrementing addresses all map into the FIFO location. This type of access is usually faster than a software loop.

Refer to the Theory of Operation section above and the Interrupts section below for more information regarding the exact sequencing and interrupt definitions.



Register Definitions

BIS_CNTLO

\$00 BISERIAL Control Register Port read/write

CONTROL REGISTER 0	
DATA BIT	DESCRIPTION
15	spare
14	spare
13	spare
12	spare
11	FAE_EN 1 = Interrupt Enabled
10	TX_INT_EN
9	spare
8	spare
7	CLK_HI_B
6	BR2
5	BR1
4	BRO
3	EXT_INT
2	INT_SET
1	INT_EN
0	STRT_TX

FIGURE 2

IP-BISERIAL-LS1 CONTROL REGISTER 0 BIT MAP

1. All bits are active high and are reset on power-up or reset command. Spare bits are R/W but have no system affect.
2. CLK_HI_B is used to let the HW know which IP reference clock is present to derive the TX Clock rate from. If running at 32 MHz. CLK_HI_B should be set. If not set when the faster IP clock is used then the baud rates will all be off by a factor of 4 [lower than actual]. Depending on cable length the faster rates may work. If set when the IP clock rate is 8 Mhz then the Baud rates will also be a factor of 4 off [faster than actual].
3. EXT_INT is used to select the clock source for the transmitter to be the external clock or one derived from the IP clock. 0 = internal, 1 = external. External = 1 MHz. source for this design. RX_Rdy input signal.
4. BR2, BR1 and BRO are the bit rate selection bits for generating the external reference clock. and the TX transmit clock.



Bit Pattern	Divisor	clk hi & 32 or !clk hi & 8
000	1	default = 8 MHz.
001	2	4 MHz.
010	4	2 MHz.
011	8	1 MHz.
100	16	.500 MHz.
101	32	.250 MHz.
110	64	.125 MHz.
111	128	.0645 MHz.

5. INT_SET is used to create an interrupt for test and software development purposes. Set the bit to cause the interrupt and clear the bit to remove the interrupt.

6. TX_INT_EN is the Interrupt Enable bit for the Transmit channel. The default state is off. If enabled and the master interrupt enable is also enabled then an interrupt is requested when the transmission is complete. The interrupt is cleared by reading the status register.

7. STRT_TX is set to send data. The bit is auto cleared at the end of a transmission.

8. INT_EN is the master interrupt enable. Default is 0. If set to 1 then either the RX or TX interrupts can occur based on the state machines and the state of the RX and TX interrupt enables. If the master interrupt enable is off [0] then no interrupts will be generated. The status register can see the interrupt requests from the RX and TX state machines to allow polled operation.

10. FAE_EN = 1 to enable the FIFO Almost Empty interrupt. When enabled an interrupt is generated when the data level falls to the programmed level.



BIS_CNTL1

[\$02 BISERIAL Control Register Port read/write

CONTROL REGISTER 1	
DATA BIT	DESCRIPTION
15-0	spare

FIGURE 3

IP-BISERIAL-LS1 CONTROL REGISTER 1 BIT MAP

Read-write unused register

BIS_CNTL2

[\$04 BISERIAL Control Register Port read/write

CONTROL REGISTER 2	
DATA BIT	DESCRIPTION
15	SPARE
14	FAF_EN 1 = Interrupt Enabled
13	SPARE
12	SPARE
11	SPARE
10	SPARE
9	SPARE
8	SPARE
7	RX_INT_EN
6	FRX_LD
5	FTX_LD
4	CLR_FIFO
3	TESTMODE
2	SPARE
1	SPARE
0	STRT_RX

FIGURE 4

IP-BISERIAL-LS1 CONTROL REGISTER 2 BIT MAP

1. CLR_FIFO is used to reset the FIFOs. The default state is reset. The FIFOs must be taken out of reset to be used to store data. Please refer to FTX_LD and FRX_LD .

2. FRX_LD is tied to the RX FIFO WE2/_LD pin. FTX_LD is tied to the TX FIFO WE2/_LD pin. When the FIFOs are taken out of reset it is possible to set-up the FIFO to accept commands to program the way the programmable almost empty and programmable almost full signals operate. ***In the standard transfer mode***



these pins are set hi before CLR_FIFO is released to use as a second WE control pin. If the PAE and PAF flags are used for a different protocol then the FIFOs will require programming.

3. RX_INT_EN is used to enable the receive interrupt. The default is disabled. If enabled and the master interrupt enable is also enabled, an interrupt is requested when the received message is complete. The interrupt is cleared by reading the status register.

4. STRT_RX is used to enable the receive state machine to receive messages. The start bit is auto-cleared at the end of a transmission.

5. TESTMODE is used to select the reference clock to the RX FIFOs. In test mode a faster clock is provided to the FIFOs to allow the interface to keep up with the IP Bus requirements. Default is 0. Normal operation is 0. The IP_CLOCK hi low bit should be set to low independent of IP clock speed so that the FIFO reference is the IP Clock at 8 or 32 MHz.

6. FAF_EN = 1 to enable the FIFO Almost Full interrupt for the receive function. The point where the interrupt occurs is programmable.

BIS_CNTL3

[\$06 BISERIAL Control Register Port read/write

CONTROL REGISTER 3	
DATA BIT	DESCRIPTION
15-11	Spare
10-0	RX Word Count

FIGURE 5

IP-BISERIAL-LS1 CONTROL REGISTER 3 BIT MAP

The RX Word Count is used to select the number of words to receive as a frame. Any length up to the FIFO length can be used. Longer lengths can be used with the PAF programmed to cause an interrupt to allow reading before overflow.



BIS_VECTOR

[\$08] BISERIAL Interrupt Vector Port

The Interrupt vector for the BISERIAL is stored in this byte wide register. This read/write register is initialized to 'xFF' upon power-on reset or software reset. The vector is stored in the odd byte location [D7..0]. The vector should be initialized before the interrupt is enabled or the mask is lowered. The interrupt is automatically cleared when the CPU acknowledges the interrupt.

BIS_STATO

[\$0A] BISERIAL Status Port [read only]

Data Bit	Status	
15	FAE_INT	FIFO Almost Empty Int 1 = active
14	FTX_AEO	PAE channel 0 [MSB] 0 = tx almost empty
13	FAF_INT	FIFO Almost Full Int 1 = active
12	FRX_AFO	PAF channel 0 [MSB] 0 = rx almost full
11	GND	read 0
10	GND	read 0
9	GND	read 0
8	GND	read 0
7	TX_INT	0 = no interrupt request 1 = interrupt request
6	FTX_FF_0	0 = full 1 = not full
5	FTX_MT_0	0 = empty 1 = not empty
4	FTX_MT_1	0 = empty 1 = not empty
3	RX_INT	0 = no interrupt request 1 = interrupt request
2	FRX_MT_0	0 = empty, 1 = not empty
1	FRX_FF_0	0 = full 1 = not full
0	FRX_FF_1	0 = full 1 = not full

FIGURE 6

IP-BISERIAL-LS1 STATUS REG 0 BIT MAP

1. The FIFO flags are active low. When the empty bit is low then the FIFO is empty. When the empty flag is high then the FIFO has at least one piece of data stored. When the Full Flag is set [low] the FIFO is full. When not set then the FIFO still has room.

2. FAE_INT, FAF_INT are set if the interrupt is enabled and the condition occurs. FAE_INT is set if the FIFO data "level" drops to the programmed level. FAF_INT is set if the FIFO data "level" increases to the programmed level. Please refer to the Cypress data sheet and the code example in the manual.



BIS_STAT1

[\$OC] BISERIAL Status Port [read only]

Data Bit	Status
100	received message count transient count value.

FIGURE 7

IP-BISERIAL-LS1 STATUS REG 1 BIT MAP

1. The received message count is the number of words received at that moment. The word count is reset when the receive state machine returns to the idle state after the interrupt is requested. The count can be polled during reception for test purposes. The count is not synchronized to the IP clock.

BISERIAL_RESET

[\$OE] BISERIAL Reset Port

The user can, by accessing this port, cause the BISERIAL to reset all major functions. The Control register, and FIFO's are cleared by a write to this port. Any data pattern can be written. The reset pulse is also sent to the state-machines. The state-machines operate on a non-IP clock basis. There will be a time delay of 1 system clock period before the reset take affect on the state-machines.

BIS_TX_FIFO_0_W

[\$10] BISERIAL FIFO byte 0 write

The BISERIAL supports byte writes to the data FIFOs. By writing a byte to this address only byte_0 is affected. D15..8 are loaded at this address. **Word writes will load both bytes.**

BIS_TX_FIFO_1_W

[\$11] BISERIAL FIFO byte 1 write

The BISERIAL supports byte writes to the TX FIFOs. By writing a byte to this address only byte_1 is affected. If a word is written to BIS_TX_FIFO_0_W this byte is loaded as well.

BIS_TX_FIFO_0_R

[\$10] BISERIAL FIFO byte 0 read

A loop-back path is provided for the TX FIFOs to allow the host to read the data stored in the TX FIFOs. Both bytes are read back through the lower byte lane



[D7..0]. Reading from this address fetches from the upper FIFO byte. Be sure to set the clock to not be divided [BR=0] and clk_hi set to low. *Once the data is read from the FIFO the data is no longer available for transmission.*

BIS_TX_FIFO_1_R

[\$14] BISERIAL FIFO byte 1 read

A loop-back path is provided for the TX FIFOs to allow the host to read the data stored in the TX FIFOs. Both bytes are read back through the lower byte lane [D7..0]. Reading from this address fetches from the lower FIFO byte. Be sure to set the clock to not be divided [BR=0] and clk_hi set to low. *Once the data is read from the FIFO the data is no longer available for transmission.*

BIS_RX_FIFO_0_W

[\$20] BISERIAL FIFO byte 0 write

A loop-back path is provided for the RX FIFOs to allow the host to load data into the RX FIFOs. Both bytes are written through the lower byte lane [D7..0]. Writing to this address loads the upper RX FIFO. This operation competes with and should not be performed during normal operation. Be sure to set the clock to not be divided [BR=0], clk_hi set to low, and testmode set to 1.

BIS_RX_FIFO_1_W

[\$24] BISERIAL FIFO byte 1 write

A loop-back path is provided for the RX FIFOs to allow the host to load data into the RX FIFOs. Both bytes are written through the lower byte lane [D7..0]. Writing to this address loads the lower RX FIFO. This operation competes with and should not be performed during normal operation. Be sure to set the clock to not be divided [BR=0], clk_hi set to low, and testmode set to 1.

BIS_RX_FIFO_0_R

[\$20] BISERIAL FIFO byte 0 read

The data stored into FIFO_0 can be accessed through this port. Byte and word accesses are available. A word access will fetch data from both FIFO 0 and FIFO 1.

BIS_RX_FIFO_1_R

[\$21] BISERIAL FIFO byte 1 read

The data stored into FIFO 1 can be accessed through this port. Only byte wide accesses are supported.



Interrupts

All IP Module interrupts are vectored. The vector from the IP-BISERIAL-LS1 comes from a vector register loaded as part of the initialization process. The vector register can be programmed to any 8 bit value. The default value is \$FF which is sometimes not a valid user vector. The software is responsible for choosing a valid user vector.

The IP-BISERIAL-LS1 state machines generate an interrupt request when a transmission or reception is complete and the INTEN bits in the control registers are set. The transmission is considered complete when the last bit is transmitted. The interrupt is mapped to interrupt request 0. The CPU will respond by asserting INT. The hardware will automatically supply the appropriate interrupt vector and clear the request when accessed by the CPU. The source of the interrupt is obtained by reading BIS_STAT0. The status remains valid until the status register is read. The interrupt status is auto-cleared when the status register is accessed.

Some carrier boards pre-fetch data. If your carrier board pre-fetches the interrupt status, then the status may be cleared when the SW goes to look at it. If this is an issue then be careful with the order of reading the registers to prevent the pre-fetching function from affecting operation.

The interrupt level seen by the CPU is determined by the IP Carrier board being used. The master interrupt can be disabled or enabled through the BIS_CNTLO register. The individual enables for TX and RX are controllable through BIS_CNTLO and BIS_CNTL2. The enable operates before the interrupt holding latch, which stores the request for the CPU. Once the interrupt request is set, the way to clear the request is to reset the board, service the request, or disable the interrupt. Toggling the interrupt enable low will clear the interrupt, the interrupt enable can be set back to enabled immediately. TX_INT_EN enables and clears the TX interrupt and RX_INT_EN enables and clears the RX interrupt request.

If operating in a polled mode and making use of the interrupts for status then the master interrupt should be disabled and the Rx or TX or both enabled. When BIS_STAT0 shows an interrupt pending the appropriate FIFO action can take place and the enable toggled to remove the interrupt request then one extra read of the BIS_STAT0 to make sure that the interrupt request is cleared before starting the next transfer. Reading the BIS_STAT0 register does clear the interrupt status, but if the source of the status is still pending [interrupt request] then the status can become set again before the SW has a chance to clear it out. Hence the necessity of one extra read for clearing purposes.



Two additional interrupt sources are available on the -LS1 model. The FIFO [TX] Programmable Almost Empty flag [PAE] and [RX] Programmable Almost Full Flag [PAF] can be used to generate interrupts. Please refer to the register definitions for the enable and interrupt status bit definitions. The Flags are active low and level sensitive. The hardware is designed with an edge detector circuit to find the transition from inactive to active. The interrupt is created when the transition is detected. The level is held until cleared. The interrupt is cleared when the status register is read. The PAF and PAE can be programmed to occur at user specified locations. The details are in the Cypress data sheet. Please also make use of our "model" code which we use to test the feature.

The PAE interrupt is useful in that large transfers can be accommodated with an interrupt programmed to let the host know that the FIFO is not empty but close and that a known amount of data can be added. Similarly, the PAF interrupt can be used to let the host know that the FIFO is almost full and that a known amount of data can be burst out of the FIFO.

Neither PAF nor PAE are likely to be used with this version due to the small messages and protocol implemented.

Power on initialization will provide a cleared interrupt request, interrupts disabled, and interrupt vector of \$FF.



ID PROM

Every IP contains an ID PROM, whose size is at least 32 x 8 bits. The ID PROM aids in software auto configuration and configuration management. The user's software, or a supplied driver, may verify that the device it expects is actually installed at the location it expects, and is nominally functional. The ID PROM contains the manufacturing revision level of the IP. If a driver requires that a particular revision to be present, it may check for it directly.

The location of the ID PROM in the host's address space is dependent on which carrier is used. Normally the ID PROM space is directly above the IP's I/O space, or at IP-base + \$80.

Standard data in the ID PROM on the IP-BISERIAL-LS1 is shown in the figure below. For more information on IP ID PROMs refer to the IP Module Logic Interface Specification, available from Dynamic Engineering.

Each of the modifications to the IP-BiSerial-IO board will be recorded with a new code in the DRIVER ID location. -LS1 is set to '31'.

Address	Data	
01	ASCII "I"	(\$49)
03	ASCII "P"	(\$50)
05	ASCII "A"	(\$41)
07	ASCII "H"	(\$48)
09	Manufacturer ID	(\$1E)
0B	Model Number	(\$01)
0D	Revision	(\$A0)
0F	reserved	(\$00)
11	Driver ID, low byte	(\$31)
13	Driver ID, high byte	(\$00)
15	No of extra bytes used	(\$0C)
17	CRC	(\$D6)

FIGURE 8

IP-BISERIAL-LS1 ID PROM



IP Module Logic Interface Pin Assignment

The figure below gives the pin assignments for the IP Module Logic Interface on the IP-BISERIAL-LS1. Pins marked n/c below are defined by the specification, but not used on the IP-BISERIAL-LS1. Also see the User Manual for your carrier board for more information.

GND		GND		1	26	
Reset*	CLK	R/W*	+5V	2	27	
D1	D0	n/c	IDSEL*	3	28	
D3	D2	n/c	MEMSEL*	4	29	
D5	D4	n/c	IntSel*	5	30	
D7	D6	n/c	IOSel*	6	31	
D9	D8	n/c	A1	7	32	
D11	D10	n/c	A2	8	33	
D13	D12	n/c	A3	9	34	
D15	D14	n/c	A4	10	35	
BS1*	BS0*	n/c	A5	11	36	
n/c	n/c	n/c	IntReq0*	12	37	
n/c	+5V	Ack*	n/c	13	38	
GND	GND	n/c	n/c	14	39	
				15	40	
				16	41	
				17	42	
				18	43	
				19	44	
				20	45	
				21	46	
				22	47	
				23	48	
				24	49	
				25	50	

NOTE 1: The no-connect signals above are defined by the IP Module Logic Interface Specification, but not used by this IP. See the Specification for more information.

NOTE 2: The layout of the pin numbers in this table corresponds to the physical placement of pins on the IP connector. Thus this table may be used to easily locate the physical pin corresponding to a desired signal. Pin 1 is marked with a square pad on the IP Module.

FIGURE 9

IP-BISERIAL-LS1 LOGIC INTERFACE



IP Module IO Interface Pin Assignment

The figure below gives the pin assignments for the IP Module IO Interface on the IP-BISERIAL-LS1. Pins marked. Also see the User Manual for your carrier board for more information.

GND	RX_STB+		1	26	
Spare+		RX_STB-	2	27	
Spare-	GND		3	28	
GND		unused	4	29	
Spare+	GND		5	30	
Spare-		unused	6	31	
GND	GND		7	32	
TX_DATA+		unused	8	33	
TX_DATA-	GND		9	34	
GND		unused	10	35	
TX_CLK+	GND		11	36	
TX_CLK-		unused	12	37	
GND	GND		13	38	
TX_STB+		GND	14	39	
TX_STB-	unused		15	40	
GND		GND	16	41	
CLKIN+	GND		17	42	
CLKIN-		unused	18	43	
GND	GND		19	44	
RX_DATA+		GND	20	45	
RX_DATA-	unused		21	46	
GND		GND	22	47	
RX_CLK+	GND		23	48	
RX_CLK-		unused	24	49	
GND	GND		25	50	

NOTE 1: The layout of the pin numbers in this table corresponds to the physical placement of pins on the IP connector. Thus this table may be used to easily locate the physical pin corresponding to a desired signal. Pin 1 is marked with a square pad on the IP Module.

FIGURE 10

IP-BISERIAL-LS1 IO INTERFACE



Applications Guide

Interfacing

Some general interfacing guidelines are presented below. Do not hesitate to contact the factory if you need more assistance.

Watch the system grounds. All electrically connected equipment should have a fail safe common ground that is large enough to handle all current loads without affecting noise immunity. Power supplies and power consuming loads should all have their own ground wires back to a common point.

Power all system power supplies from one switch. Connecting external voltage to the IP-BISERIAL-LS1 when it is not powered can damage it, as well as the rest of the host system. This problem may be avoided by turning all power supplies on and off at the same time. Alternatively, the use of OPTO-22 isolation panels is recommended.

Keep cables short. Flat cables, even with alternate ground lines, are not suitable for long distances. IP-BISERIAL-LS1 does not contain special input protection.

We provide the components. You provide the system. Safety and reliability can be achieved only by careful planning and practice. Inputs can be damaged by static discharge, by applying voltage less than ground or more than +5 volts with the IP powered. With the IP unpowered, driven input voltages should be kept within .7 volts of ground potential.

Terminal Block. We offer a high quality 50 screw terminal block that directly connects to the flat cable. The terminal block mounts on standard DIN rails. [<http://www.dyneng.com/HDRterm50.html>]

Many flat cable interface products are available from third party vendors to assist you in your system integration and debugging. These include connectors, cables, test points, 'Y's, 50 pin in-line switches, breakout boxes, etc.



Construction and Reliability

IP Modules were conceived and engineered for rugged industrial environments. The IP-BISERIAL-LS1 is constructed out of 0.062 inch thick FR4 material.

Through hole and surface mounting of components are used. IC sockets use gold plated screw machine pins. High insertion and removal forces are required, which assists in the retention of components. If the application requires unusually high reliability or is in an environment subject to high vibration, the user may solder the corner pins of each socketed IC into the socket, using a grounded soldering iron.

The IP Module connectors are keyed and shrouded with Gold plated pins on both plugs and receptacles. They are rated at 1 Amp per pin, 200 insertion cycles minimum. These connectors make consistent, correct insertion easy and reliable.

The IP is secured against the carrier with four metric M2 stainless steel screws. The heads of the screws are countersunk into the IP. The four screws provide significant protection against shock, vibration, and incomplete insertion. For most applications, they are not required.

The IP Module provides a low temperature coefficient of 0.89 W/°C for uniform heat. This is based upon the temperature coefficient of the base FR4 material of 0.31 W/m-°C, and taking into account the thickness and area of the IP. The coefficient means that if 0.89 Watts are applied uniformly on the component side, then the temperature difference between the component side and solder side is one degree Celsius.



Thermal Considerations

The BISERIAL design consists of CMOS circuits. The power dissipation due to internal circuitry is very low. It is possible to create a higher power dissipation with the externally connected logic. If more than one a Watt is required to be dissipated due to external loading then forced air cooling is recommended. With the one degree differential temperature to the solder side of the board external cooling is easily accomplished.

Warranty and Repair

Dynamic Engineering warrants this product to be free from defects in workmanship and materials under normal use and service and in its original, unmodified condition, for a period of one year from the time of purchase. If the product is found to be defective within the terms of this warranty, Dynamic Engineering's sole responsibility shall be to repair, or at Dynamic Engineering's sole option to replace, the defective product. The product must be returned by the original customer, insured, and shipped prepaid to Dynamic Engineering. All replaced products become the sole property of Dynamic Engineering.

Dynamic Engineering's warranty of and liability for defective products is limited to that set forth herein. Dynamic Engineering disclaims and excludes all other product warranties and product liability, expressed or implied, including but not limited to any implied warranties of merchandisability or fitness for a particular purpose or use, liability for negligence in manufacture or shipment of product, liability for injury to persons or property, or for any incidental or consequential damages.

Dynamic Engineering's products are not authorized for use as critical components in life support devices or systems without the express written approval of the president of Dynamic Engineering.



Service Policy

Before returning a product for repair, verify as well as possible that the suspected unit is at fault. Then call the Customer Service Department for a RETURN MATERIAL AUTHORIZATION (RMA) number. Carefully package the unit, in the original shipping carton if this is available, and ship prepaid and insured with the RMA number clearly written on the outside of the package. Include a return address and the telephone number of a technical contact. For out-of-warranty repairs, a purchase order for repair charges must accompany the return. Dynamic Engineering will not be responsible for damages due to improper packaging of returned items. For service on Dynamic Engineering Products not purchased directly from Dynamic Engineering contact your reseller. Products returned to Dynamic Engineering for repair by other than the original customer will be treated as out-of-warranty.

Out of Warranty Repairs

Out of warranty repairs will be billed on a material and labor basis. The current minimum repair charge is \$100. Customer approval will be obtained before repairing any item if the repair charges will exceed one half of the quantity one list price for that unit. Return transportation and insurance will be billed as part of the repair and is in addition to the minimum charge.

For Service Contact:

Customer Service Department
Dynamic Engineering
435 Park Dr.
Ben Lomond, CA 95005
831-336-8891
831-336-3840 fax
e-mail support@dyneng.com



Specifications

Logic Interface:	IP Module Logic Interface
Serial Interface:	RS-485 Data, clock, strobe TX and RX
TX CLK rates generated:	4 MHz TX
Software Interface:	Control Registers, ID PROM, Vector Register, Status Ports, FIFO
Initialization:	Hardware Reset forces all registers to 0. Software Reset Command resets the control register, and FIFO's.
Access Modes:	Word or byte I/O Space (see memory map) Word in ID Space Vectored interrupt
Access Time:	back-to-back cycles in 500ns (8Mhz.) or 125 nS (32 Mhz.) to/from FIFO
Wait States:	1 to ID space, 3 to IO or INT space
Interrupt:	Tx interrupt at end of transmission Rx interrupt at end of transmission or end of terminal count PAF Interrupt when RX FIFO is Almost Full PAE Interrupt when TX FIFO is Almost Empty
DMA:	No Logic Interface DMA Support implemented. Memory Space maps into the FIFOs to allow auto-incrementing accesses
Onboard Options:	All Options are Software Programmable
Interface Options:	50 pin flat cable 50 screw terminal block interface [HDRterm50] User cable
Dimensions:	Standard Single IP Module. 1.8 x 3.9 x 0.344 (max.) inches
Construction:	FR4 Multi-Layer Printed Circuit, Through Hole and Surface Mount Components. Programmable parts are socketed.
Temperature Coefficient:	0.89 W/°C for uniform heat across IP
Power:	Max. 220 mA @ 5V



Order Information

IP-BISERIAL-LS1

IP Module with 1 Tx and 1 Rx serial channel,
Standard protocol support,
RS-485 drivers and receivers
16 bit IP interface

Tools for IP-BISERIAL-LS1

IP-Debug-Bus - IP Bus interface extender with
testpoints, isolated power and quickswitch
technology to allow hot swapping of IPs or power
cycling without powering down the host.
<http://www.dyneng.com/ipdbgbus.html>

IP-Debug-IO II - IndustryPack IO connector breakout
with testpoints, ribbon cable headers, and
locations for user circuits.
<http://www.dyneng.com/ipdbgio.html>

HDRterm50 - Ribbon cable compatible 50 pin
header to 50 screw terminal header. Comes with
DIN rail mounting capability.
<http://www.dyneng.com/HDRterm50.html>

PCI3IP - 1/2 length PCI card with 3 IP slots.
http://www.dyneng.com/pci_3_ip.html

All information provided is Copyright Dynamic Engineering



Hardware and Software Design

Page 29 of 32

Programming Reference

Programmable Almost Empty Flag Example

```
/*
TX FIFO Test adapted for programmable flag tests
slot a
board 0
check status and read - write patterns

* kvl 12-28-97
* updated for spartan implementation 5-25-99 KVL
* updated for flag tests 7/6/99
* Dynamic Engineering
* Copyright 1997,1999 Dynamic Engineering All Rights Reserved.
* 435 Park Dr.
* Ben Lomond, Ca. 95005
* 408-336-8891
* engineering@dyneng.com
* http://www.dyneng.com
*/
/*
/* at this point AE has been checked to work with the default value */
/* check again with a new value */
/* reset the FIFOs and place into the two enable mode. */
/* program the PAE flag to trigger at 16 instead of 7 */
/* load fifo to default check point and test then to new check point */
/* and test again */
/* set LD control low with reset hi
then set reset low with LD low
then set reset hi to clear the FIFO with the WE control in the dual mode */

data_out = 0x0058; //clr fifo hi, LD lo for TX, testmode
putword(base1,(pci40_ioa_st + bisS_cntl2),hWinRT,iWinRTlength,data_out);
data_out = 0x0048; //clr FIFO lo, ld lo, testmode
putword(base1,(pci40_ioa_st + bisS_cntl2),hWinRT,iWinRTlength,data_out);
data_out = 0x0058; //clr FIFO hi, ld lo, testmode
putword(base1,(pci40_ioa_st + bisS_cntl2),hWinRT,iWinRTlength,data_out);

/* should now be reset into the dual WE mode */

// check status to see if empty
data_in = 0x4070 & getword(base1,(pci40_ioa_st + bisS_stat0),hWinRT,iWinRTlength);
//read pattern back and check if correct empty, almost empty and not full
if(0x40 != (short)data_in)
{
error = 1;
testdata[1] = 0x40;
testdata[2] = data_in;
putword(base1,(pci40_ioa_st + bisS_cntl0),hWinRT,iWinRTlength,cntl0_copy);
putword(base1,(pci40_ioa_st + bisS_cntl2),hWinRT,iWinRTlength,cntl2_copy);
}
```



```

WinRTCloseDevice(hWinRT);
return(error);
}

/* now program the PAE to be at the new value */
/* first write with LD low = LSB of PAE, second = upper 5 bits of PAE
   third = LSB of PAF and 4th = upper 5 bits of PAF */

/* flag comes from upper byte ...lower data does not matter */
data_out = 0x1000;
putword(base1,(pci40_ioa_st + bisS_ftx_O_w),hWinRT,iWinRTlength,data_out);

/* read from output port with LD low to read back new value */
data_in = 0x00ff & getword(base1,(pci40_ioa_st + bisS_ftx_O_r),hWinRT,iWinRTlength); //read
pattern back and check if correct
/* put into data mode by re-writing with reset hi and LD hi. */

data_out = 0x0078; //clr FIFO hi, ld lo, testmode
putword(base1,(pci40_ioa_st + bisS_cntl2),hWinRT,iWinRTlength,data_out);

// Load both bytes
data_out = 0x00;
for(j=0; j<8; j++) { //check that AE flag does not change to not AE, still not full
putword(base1,(pci40_ioa_st + bisS_ftx_O_w),hWinRT,iWinRTlength,data_out);
data_out = 0xffff & (data_out + 1);
}

// check status check if upper & lower bytes are not empty
data_in = 0x4070 & getword(base1,(pci40_ioa_st + bisS_stat0),hWinRT,iWinRTlength);
//read pattern back and check if correct not empty, not almost empty and not full flags
if(0x0070 != (short)data_in // should not have PAE flag cleared yet
{
error = 2;
testdata[1] = 0x0070;
testdata[2] = data_in;
putword(base1,(pci40_ioa_st + bisS_cntl0),hWinRT,iWinRTlength,cntl0_copy);
putword(base1,(pci40_ioa_st + bisS_cntl2),hWinRT,iWinRTlength,cntl2_copy);
WinRTCloseDevice(hWinRT);
return(error);
}
// now low with more data and see if flag is set at the proper time
data_out = 0x00;
for(j=0; j<0xa; j++) { //check that AE flag changes to not AE, still not full
putword(base1,(pci40_ioa_st + bisS_ftx_O_w),hWinRT,iWinRTlength,data_out);
// fill FIFO with pattern
data_out = 0xffff & (data_out + 1);
}

data_in = 0x4070 & getword(base1,(pci40_ioa_st + bisS_stat0),hWinRT,iWinRTlength);
//read pattern back and check if correct not empty, not almost empty and not full flags
if(0x4070 != (short)data_in // should have PAE flag cleared
{

```



```
error = 2;
testdata[1] = 0x4070;
testdata[2] = data_in;
putword(base1,(pci40_ioa_st + bisS_cntl0),hWinRT,iWinRTlength,cntl0_copy);
putword(base1,(pci40_ioa_st + bisS_cntl2),hWinRT,iWinRTlength,cntl2_copy);
WinRTCloseDevice(hWinRT);
return(error);
}
```

